


IN00369 (rev C)

Half Frame Radius Bath Screen

- Instruction suitable for both Right and Left Hand fixing variations.
- This product is designed to open outwards.




AQUALOX
— Est 1979 —

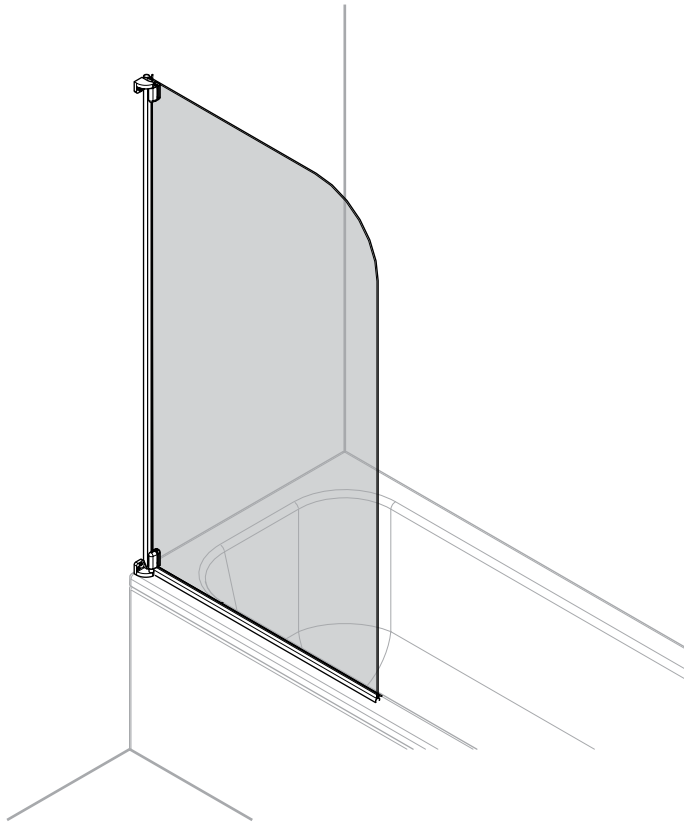

Before You Start

- Check that the bath has been installed correctly and that it is level (Fig. A), tiled down onto and sealed to the manufacturer's guidelines. **Please Note:** All product supplied without bath.
- Check that there is sufficient space on the bath for the product and that the screen movement does not foul other items such as sinks and taps.
- **Please Note:** This product is outward opening only.
- Ensure the product is fitted to a non-porous surface ie. tiled. Check that the wall surface is flat.
- Unpack and check the product is complete and undamaged.
- Fixings are supplied for solid walls only. Ensure that the correct fixings are used for the wall type – if in doubt seek professional advice
- Ensure the area is clean, dry and dust free.
- Read the instructions in full.
- Have the correct tools available, (as shown below, see 'Tools Required').

Fig.A.

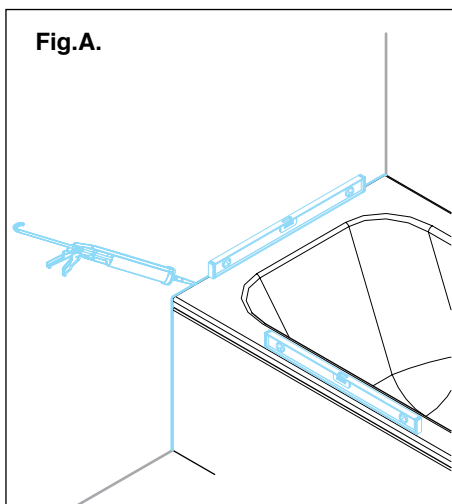

Safety

- Handle all glass with care - support on cardboard to avoid risk of breakage.
- This product is heavy and requires 2 people to carry and install it.
- When drilling walls check first for hidden pipes and cables.
- All glass is toughened – it cannot be reworked or replaced by ordinary glass.
- Use safety eyewear when drilling.
- Use safety eyewear when handling glass.
- Keep all small parts away from children.

Disclaimer

- Please notify the retailer immediately of any damage or faults. The manufacturer cannot be held responsible for any installation costs that may arise from damaged or faulty product being installed.
- Please dispose of all packaging with due regard to the environment.

Tools Required (not supplied)

Spirit Level 	Screwdriver 	Tape Measure 	Pencil 	Utility Knife
Junior Hacksaw 	Silicone Gun & Sealant 	Power Drill 	Suitable Drill Bits 6mm dia. *	* Ensure drill bit used is suitable for wall surface



Help Line: 0870 241 6131

Lines open: 8.30am - 5.00pm Monday to Friday
Standard National call charge rate from BT landlines


Parts & Fittings Supplied




Please notify the retailer immediately of any damage or faults. The manufacturer cannot be held responsible for any installation costs that may arise from a damaged or faulty product being installed.




Keep small parts away from children

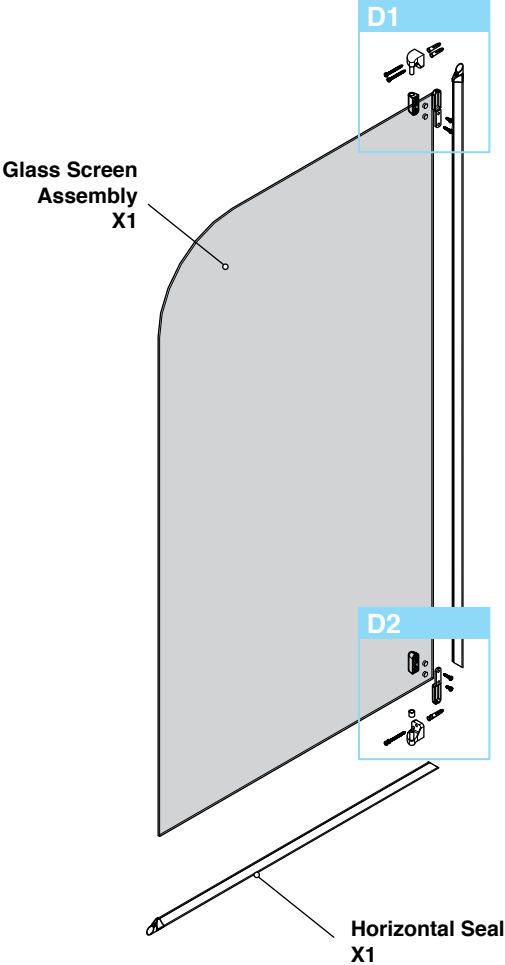





D1

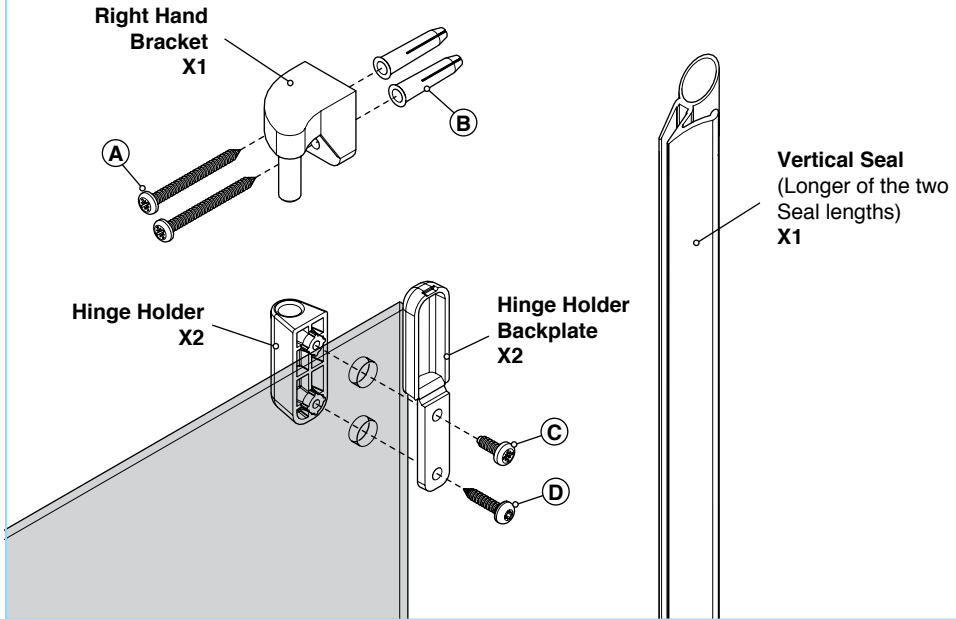


D2

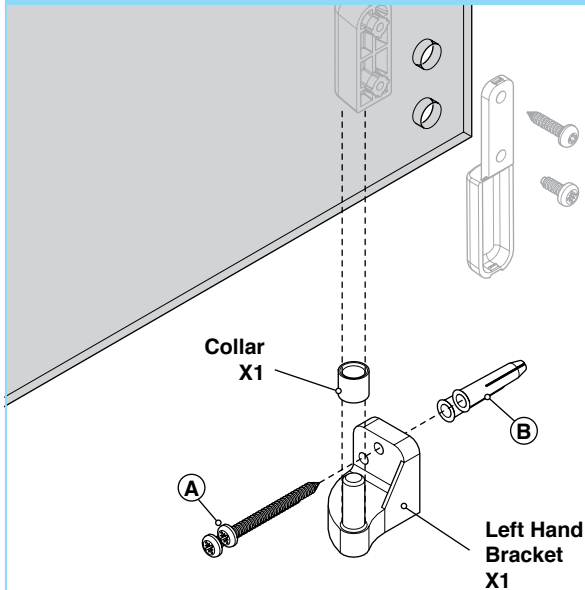

Loose Screws & Fittings Supplied


A	No.8 x 1 3/4" Pan Head Pozi Screws		Qty
			x4
B	Wall Plugs		Qty
			x4
C	No.8 x 11mm Pan Head Pozi Screws		Qty
			x2
D	No.8 x 3/4" Pan Head Pozi Screws		Qty
			x2

1.1

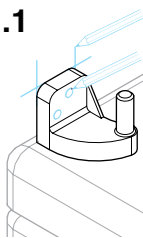


Mark position of holes in (Left/ Right Hand) Bottom Bracket. Observe correct orientation of the pin feature.

1.2

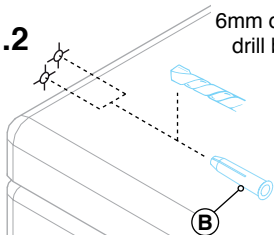


6mm dia. holes with drill bit suitable for wall surface.

1.3

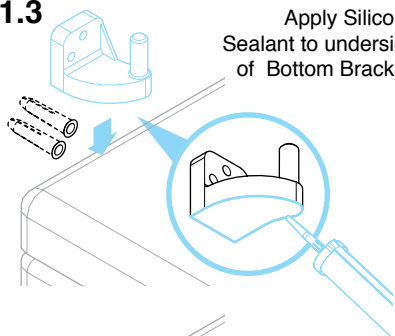


Apply Silicone Sealant to underside of Bottom Bracket.

1.4

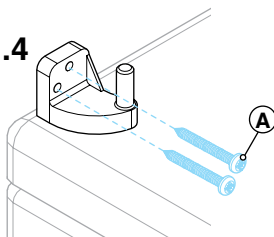

1.5

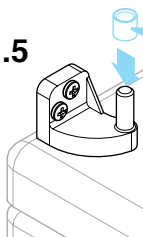

Position Collar onto the Bottom Moulding.



Wall plugs supplied are for solid walls only. Ensure correct wall plug for wall type is used. If in doubt seek professional advice.




Tip: When drilling tiles apply masking tape to surface to stop drill bit slipping.



Ensure Collar is applied to the Bottom Moulding to space Bath Screen off bath.




1

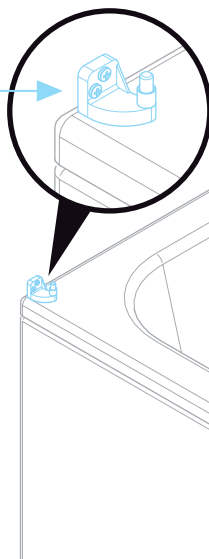

Ensure correct handed Bracket is used to suit handing of Bath Screen.

Inside View

2

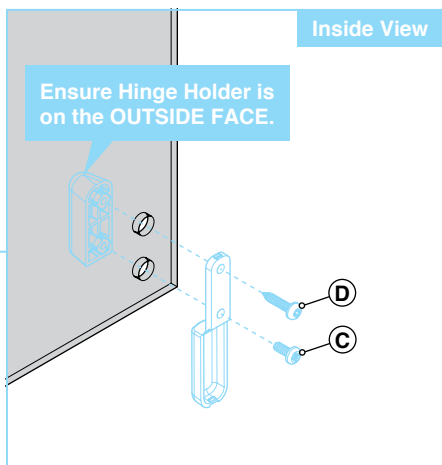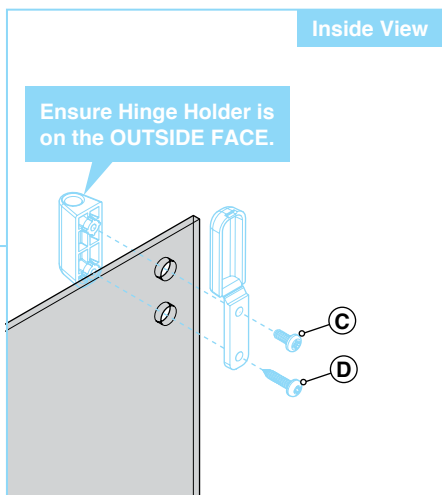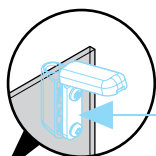


IMPORTANT NOTE:
Ensure correct screws are used.



Ensure correct Bath Screen Assembly orientation to suit required handing.
Hinge Holder must be positioned onto the OUTSIDE face of the Bath Screen Assembly.


Inside View

3

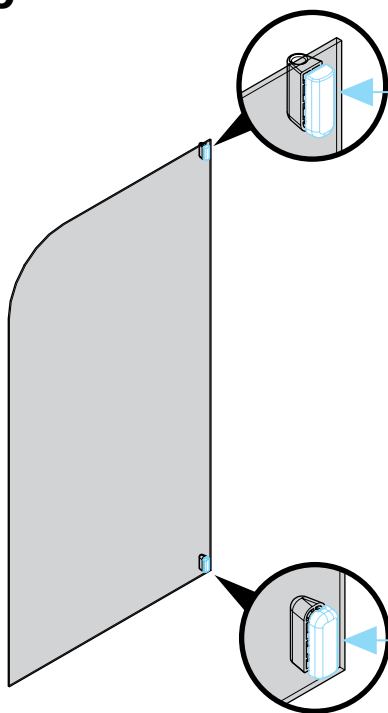


3.1


Inside View

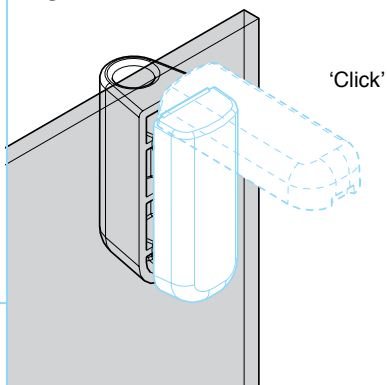

3.2

Inside View

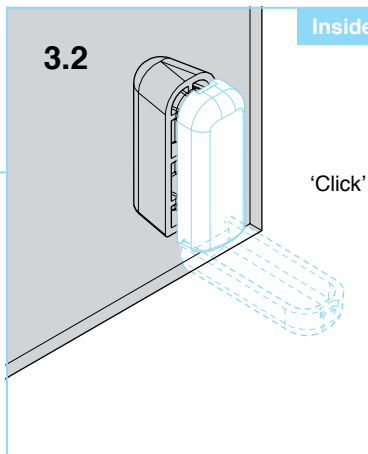

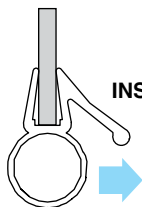


INSIDE

Please Note:
Ensure seal
deflector faces
INWARDS.




IMPORTANT NOTE:
Prior to cutting, ensure both
Horizontal and Vertical Seals are
correctly positioned, mitre joint as
shown, adjust to suit.

Inside View

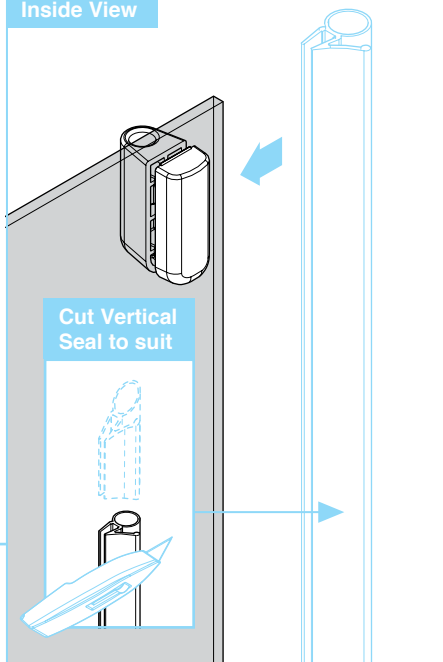


Inside View

4

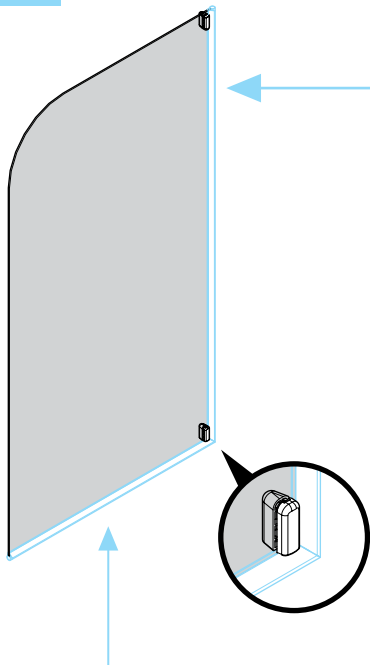


Inside View

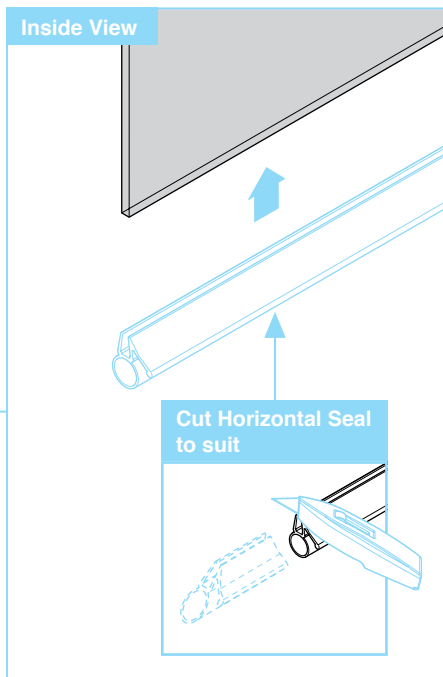


Tip:
To Push fit Horizontal and Vertical
Seals start in the bottom corner
and work across the Bath Screen
Assembly.

5

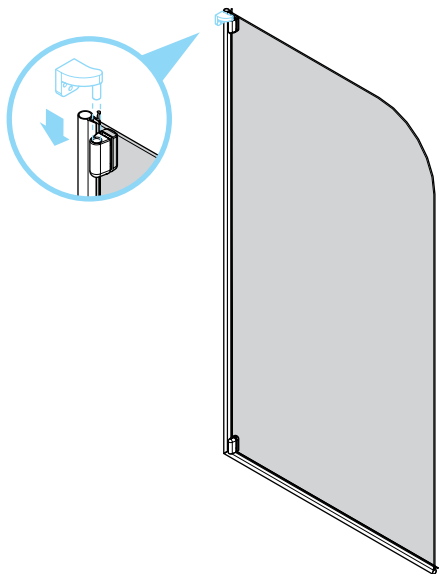


6

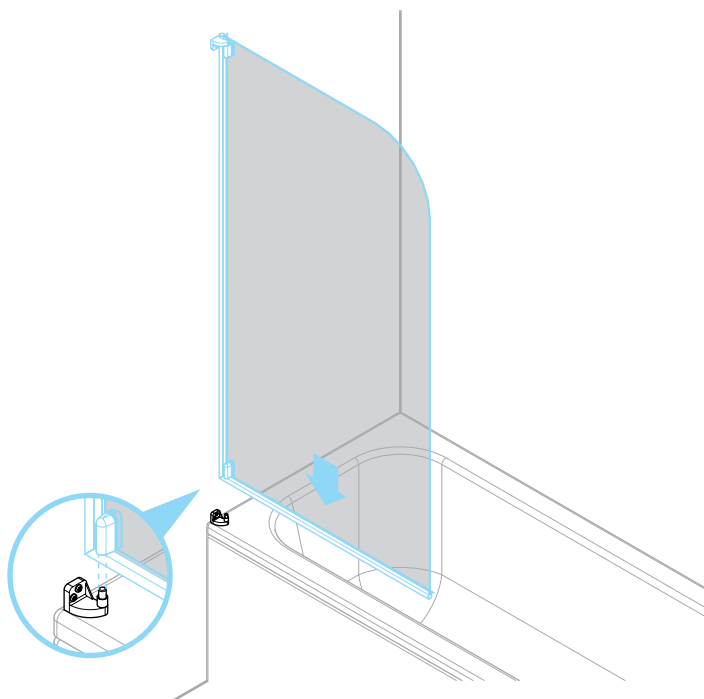

7.1

Mark position of
holes in (Left/ Right
Hand) Top Bracket.

Ensure bracket
is fully inserted
down into the
hinge holder.

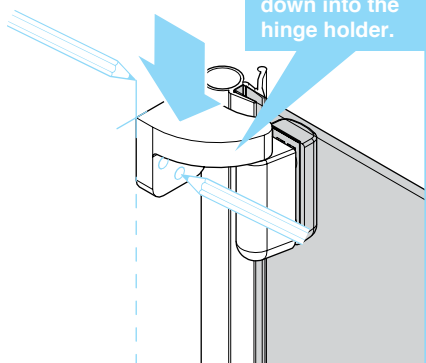


IMPORTANT NOTE:




Prior to marking Top Bracket
position, ensure Top Bracket
and Bottom Brackets line up
level and straight.

7.2

6mm dia. holes with
drill bit suitable for
wall surface.

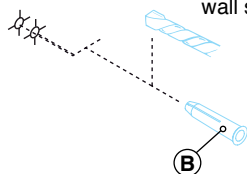

7.3

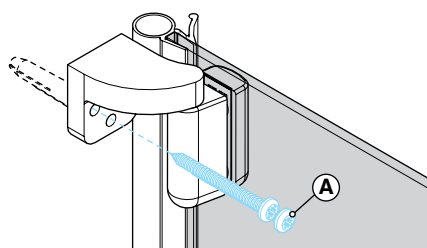


IMPORTANT NOTE:
Ensure Top and Bottom Brackets line
up level and straight.

7



Ensure Glass
Screen is level.

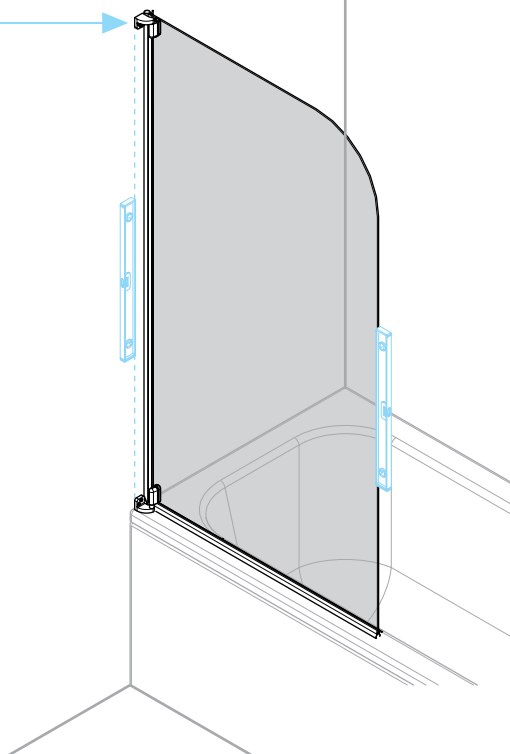

Wall plugs supplied are for solid
walls only. Ensure correct wall plug
for wall type is used. If in doubt seek
professional advice.



Tip: When drilling tiles apply masking
tape to surface to stop drill bit
slipping.

Notes: